

nsi

Polish Pro

LED/UV Gel Polish

POLISH PRO MATTE TOP COAT




STEP 1:

After shaping the free edge of the natural nail, gently push back and remove the cuticles with an orangewood stick or other implement.



STEP 2:

A gentle, light buffing using an **Endurance 180/180 Grit File** or **Endurance 180/240 Grit Buffer** to remove surface oils will improve adhesion. Clean and dehydrate the nail plate using a **Nail Wipe** saturated in **Nailpure Plus**.

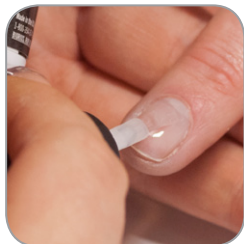

STEP 3:

Apply an even layer of **Polish Pro Base Coat Plus** to all five fingers. Be sure to cap the edges. Cure in any full hand UV lamp for 2 minutes, or any LED lamp for 30 seconds.

*For clients with weaker nails, use **Polish Pro Endure Base Coat**. Being sure to cap the free edges, cure in any full hand UV lamp for 90 seconds, or an LED lamp for 30 seconds.*



STEP 4:

Shake the **Polish Pro** color of your choice well before use. Apply a layer of color. The first layer may look semi-translucent. Cure for 2 minutes in any full hand UV lamp or 30 seconds in an LED lamp. Repeat for full coverage.



STEP 5:

Apply a layer of **Polish Pro Matte Top Coat**, sealing and capping the edges. Cure for 2 minutes in any full hand UV lamp, or 30 seconds in an LED lamp. Remove the tacky layer with a **Nail Wipe** saturated with **Cleanse**.



STEP 6:

Condition the cuticle with a drop of **Nurture Oil**. With no additional drying time, your client will love this edgy chip-proof, smudge-free color that last 2-3 times longer - the mani of her dreams.